

INSTALLATION AND USER MANUAL

XIT 900mm Induction Hob



XITID90

Contents

Safety	3-5
User Guide	6-15
Control Panel layout	6
Function Key List	7
Product information & using the controls	8
Choosing the right Cookware	9-10
Using your Hob/Control Panel	11-15
Cooking Guidelines	16
Cooking	16
Heat Settings	17
Care and Cleaning	18
Trouble Shooting	19-20
Specifications	21
Installation	22-24

SAFETY WARNINGS

Please read this user manual thoroughly before attempting to use this appliance for the first time. This manual contains important information on safe installation, use and care of the appliance. Keep these instructions for reference and pass them on to future user.



Installation

Electrical Shock Hazard

- Disconnect the appliance from the mains electricity supply before carrying out any work or maintenance on it.
- Connection to a good earth wiring system is essential and mandatory.
- Alterations to the domestic wiring system must only be made by a qualified electrician.
- Failure to follow this advice may result in electrical shock or death.



Cut Hazard

- Take care – panel edges are sharp.
- Failure to use caution could result in injury or cuts.

Important safety instructions

- Read these instructions carefully before installing or using this appliance.
- No combustible material or products should be placed on this appliance at any time.
- Please make this information available to the person responsible for installing the appliance as it could reduce your installation costs.
- In order to avoid a hazard, this appliance must be installed according to these instructions for installation.
- This appliance is to be properly installed and earthed only by a suitably qualified person.
- This appliance should be connected to a circuit which incorporates an isolating switch providing full disconnection from the power supply.
- Failure to install the appliance correctly could invalidate any warranty or liability claims.

Operation and maintenance

Electrical Shock Hazard

- Do not cook on a broken or cracked hob. If the hob surface is broken or cracked, switch the appliance off immediately at the mains power supply (wall switch) and contact a qualified technician.

Operation and maintenance

Electrical Shock Hazard

- Switch the hob off at the wall before cleaning or maintenance.
- Failure to follow this advice may result in electrical shock or death.

Health Hazard

- This appliance complies with electromagnetic safety standards.

Hot Surface Hazard

- During use, accessible parts of this appliance will become hot enough to cause burns.
- Do not let your body, clothing or any item other than suitable cookware contact the ceramic glass until the surface is cool.
- Metallic objects such as knives, forks, spoons and lids should not be placed on the hob surface since they can get hot
- Keep children away.
- Handles of saucepans may be hot to touch. Check saucepan handles do not overhang other cooking zones that are on. Keep handles out of reach of children.
- Failure to follow this advice could result in burns and scalds.

Cut Hazard

- The razor-sharp blade of a hob scraper is exposed when the safety cover is retracted. Use with extreme care and always store safely and out of reach of children.
- Failure to use caution could result in injury or cuts.

Important safety instructions

- Never leave the appliance unattended when in use. Boil over causes smoking and greasy spillovers that may ignite.
- Never use your appliance as a work or storage surface.
- Never leave any objects or utensils on the appliance.
- Never use your appliance for warming or heating the room.
- After use, always turn off the cooking zones and the hob as described in this manual (i.e. by using the touch controls).
- Do not allow children to play with the appliance or sit, stand, or climb on it.
- Do not store items of interest to children in cabinets above the appliance. Children climbing on the hob could be seriously injured.
- Do not leave children alone or unattended in the area where the appliance is in use.
- Children or persons with a disability which limits their ability to use the appliance should have a responsible and competent person to instruct them in its use. The instructor should be satisfied that they can use the appliance without danger to themselves or their surroundings.
- Do not repair or replace any part of the appliance unless specifically recommended in the manual. All other servicing should be done by a qualified technician.

- Do not use a steam cleaner to clean your hob.
- Do not place or drop heavy objects on your hob.
- Do not stand on your hob.
- Do not use pans with jagged edges or drag pans across the glass surface as this can scratch the glass.
- Do not use scourers or any other harsh abrasive cleaning agents to clean your hob, as these can scratch the ceramic glass.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance is intended to be used in a domestic household environment only! Commercial use of any kind is not covered under the manufacturer's warranty!

WARNING:

- The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children without supervision.

WARNING:

- Unattended cooking on a hob with fat or oil can be dangerous and may result in fire. NEVER try to extinguish a fire with water, but switch off the appliance and then cover flame e.g. with a lid or a fire blanket.

WARNING:

- Danger of fire: do not store items on the cooking surfaces.

WARNING:

- If the surface is cracked, switch off the appliance to avoid the possibility of electric shock, as hob surface protects live electric components.
- A steam cleaner is not to be used.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.


Congratulations on the purchase of your new hob.

We recommend that you spend some time to read this Instruction / Installation Manual in order to fully understand how to install correctly and operate it. For installation, please read the installation section. Read all the safety instructions carefully before use and keep this Instruction / Installation Manual for future reference.

User Guide

Model: XITID90



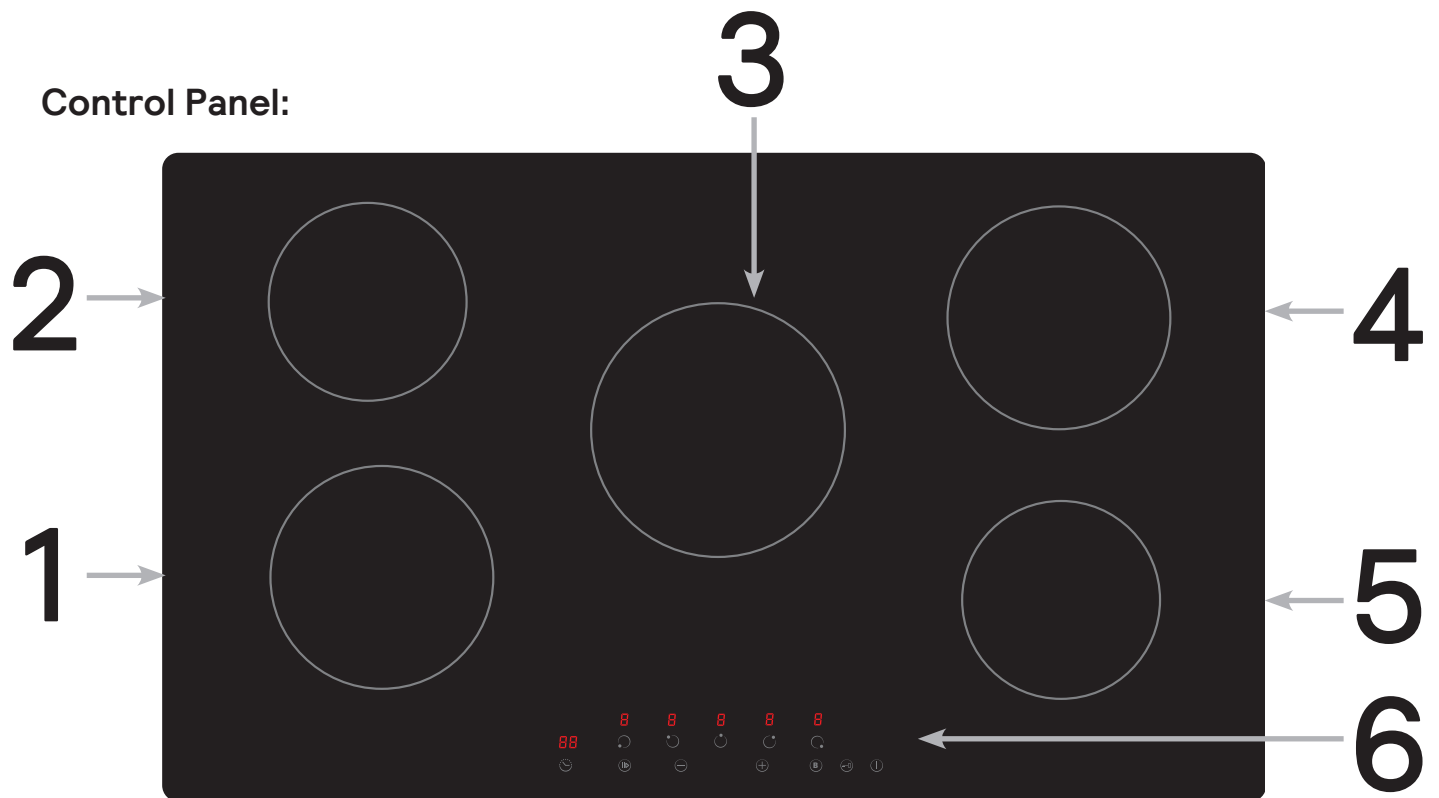




1) Remove all protective poly film from the hob and/or parts.




 - 1. 1800/2200W zone
- 2. 1200/1500W zone
- 3. 2000/2300W zone

- 4. 1200/1500W zone
- 5. 1800/2200W zone
- 6. Control panel

Function Key List:

Symbol	Function
	ON/OFF key
	Cooking zone selection keys
	Power level or timer adjusting keys
	Child lock key
	Timer key
	Power Booster key
	Pause key

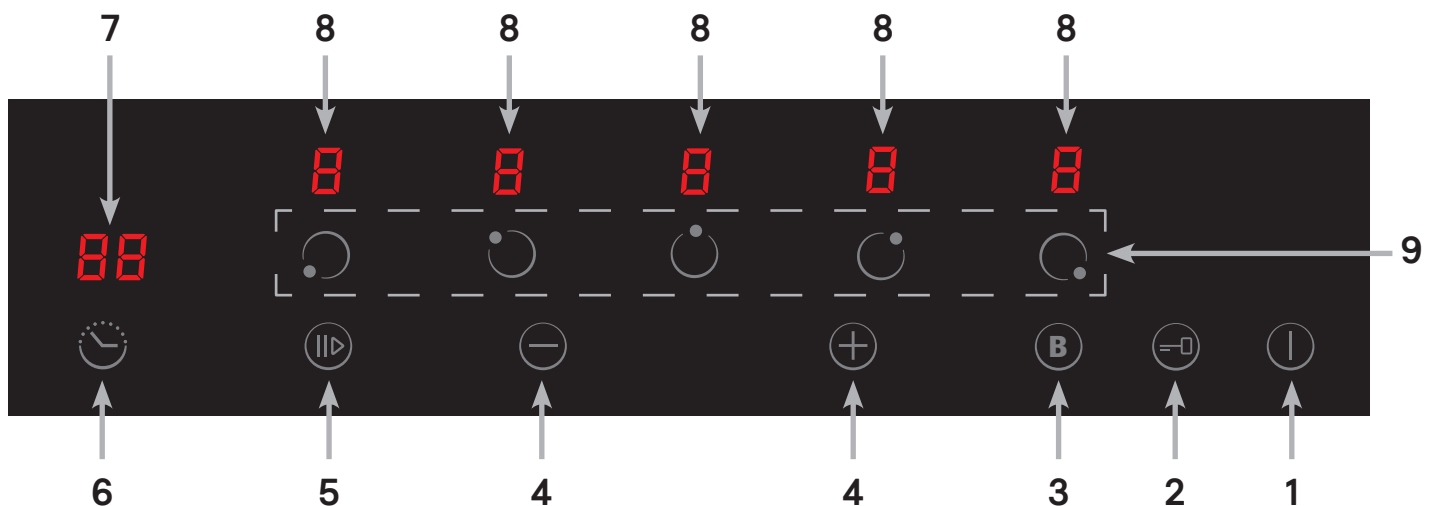

- | | |
|-----------------------------|------------------------------------|
| 1. ON/OFF key | 6. Timer key |
| 2. Child lock key | 7. Timer display LED |
| 3. Booster | 8. Heating power level display LED |
| 4. Power and time adjusting | 9. Heating zone selection keys |
| 5. Pause | |


User Guide

Product Information

The induction hob represents a modern cooking appliance from the traditional hob, due to its advantages like easy cleaning, high efficiency, ECO-friendly and safety features.

A Word on Induction Cooking (For Induction Hobs Only)

Induction cooking is a safe, advanced, efficient, and economical technology. It works through electromagnetic vibrations that generate heat directly in the pan, rather than indirectly by heating the glass surface. The glass becomes hot only because the pan eventually warms it up.

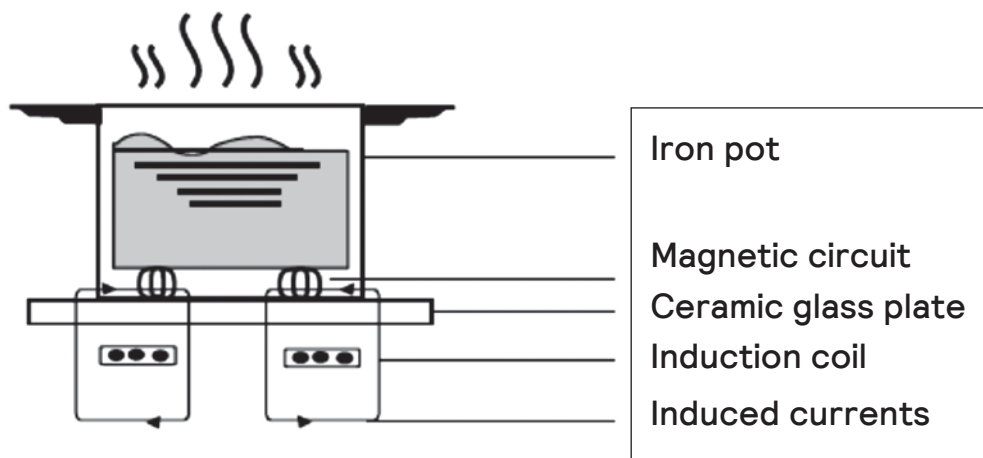


Before using your New Hob

- Read this guide, taking special note of the 'Safety Warnings' section.
- Remove any protective film that may still be on your hob.

Using the Touch Controls

- The controls respond to touch, so you don't need to apply any pressure.
- Use the ball of your finger, not its tip.
- You will hear a beep each time a touch is registered.
- Make sure the controls are always clean, dry, and that there is no object (e.g. a utensil or a cloth) covering them. Even a thin film of water may make the controls difficult to operate.

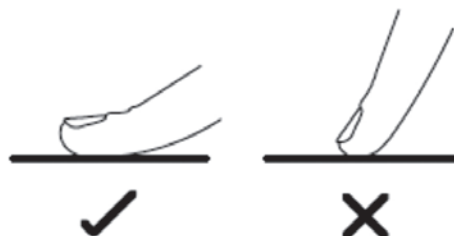


Choosing the right Cookware (for Induction hob)



- Only ferromagnetic cookwares are suitable for induction cooking. Look for the induction symbol on the packaging or on the bottom of the pan.


- You can check whether your cookware is suitable by carrying out a magnet test. Move a magnet towards the base of the pan. If it is attracted, the pan is suitable for induction.

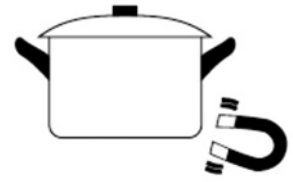

- If you do not have a magnet:

1. Put some water in the pan you want to check.

2. Follow the steps under 'To start cooking'.

3. If  does not flash in the display and the water is heating, the pan is suitable.


- Cookware made from the following materials is not suitable: pure stainless steel, aluminum or copper without a magnetic base, glass, wood, porcelain, ceramic and earthenware.

Size of hob (mm)	Minimum cookware size (Ømm)
160	120
180	140
210	160
280	220
190x180	140
180x380	240
210x190	160
210x380	240


Do not use cookware with jagged edges or a curved base.



Make sure that the base of your pan is smooth, sits flat against the glass, and is the same size as the cooking zone. Always centre your pan on the cooking zone.

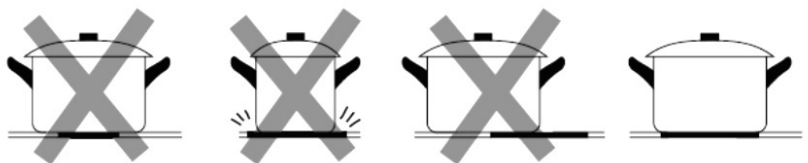


Always lift pans off the hob – do not slide, or they may scratch the glass.

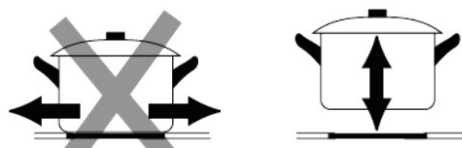

User Guide

If the base of the cookware is only partially ferromagnetic, only the area that is ferromagnetic will heat up. This may mean that heat will not be distributed evenly. The non-ferromagnetic area may not heat up to a sufficient temperature for cooking.

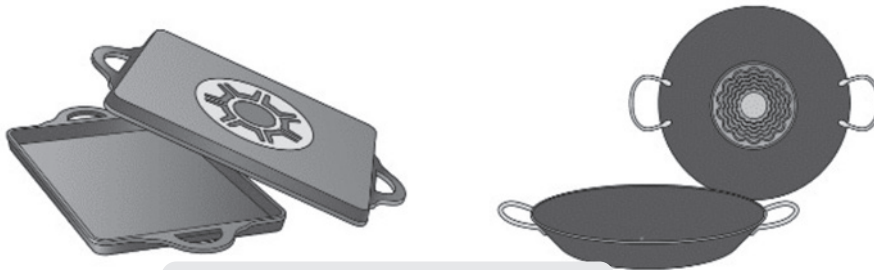


NOT RECOMMENDED

The ferromagnetic area will also be reduced if the material from which the base of the cookware is made contains aluminum, for example. This may mean that the cookware will not become sufficiently hot or even that it will not be detected.



NOT RECOMMENDED



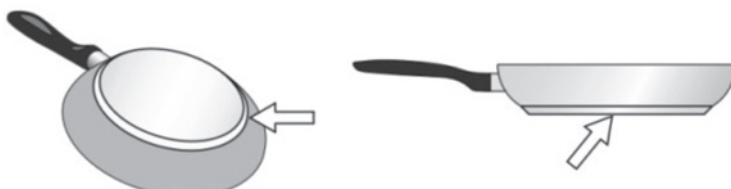

The material(s) from which the base of the cookware is made can affect the cooking result. Using pots and pans made from materials that distribute heat evenly through them, such as stainless-steel pans with a three-layer base, saves time and energy. Use cookware with a flat base; if the base of the cookware is uneven, this may impair the heat supply.









RECOMMENDED

Using your Hob

To start cooking


- After power on, the buzzer beeps once, all the indicators light up for 1 second then go out, indicating that the hob has entered the state of standby mode.
1. Touch the main switch key . All the indicators show “-”.
 2. Place a suitable pan on the cooking zone that you wish to use.
 - Make sure the bottom of the pan and the surface of the cooking zone are clean and dry.
 3. Touching the cooking zone selecting key, an indicator next to the key will flash. 
 4. Select power level by touching the  or  control.
 - If you don't choose a heat setting within 1 minute, the hob will automatically switch off. You will need to start again at step 1.
 - You can modify the heat setting at any time during cooking.

When you have finished cooking

1. Select the zone key     that you wish to switch off.
2. Turn the cooking zone off by touching  until power level reduce to “0”.
Make sure the display shows “0”.
3. Turn the whole hob off by touching the main switch .
4. Beware of hot surfaces “H” will show which cooking zone is too hot. It will disappear when the surface has cooled down to a safe temperature. It can also be used as an energy saving function if you want to heat further pans, use the cooking zone that is still hot.


Using Boost function (If available)

Activate the boost function

1. Select the zone you want to boost.
2. Touch BOOST function key  and power level indication shows “P”.

User Guide



Cancel Boost function

1. Select the zone under BOOST mode.
2. Touching the power changing key  to cancel the Boost function, and select the level you want to set.
 - Boost function can only last for 5 minutes, after that the zone will go to level 9 automatically.


Child Lock Function

- You can lock the controls to prevent unintended use (for example children accidentally turning the cooking zones on).
- When the controls are locked, all the controls except the **ON/OFF** control are disabled.

To lock the controls

Touch the keylock  control. The timer indicator will show “Lo”. 


To unlock the controls

1. Make sure the hob is turned on.
2. Touch and hold the keylock control  for a while.
3. You can now start using your new hob.



When the hob is in lock mode, all the controls are disabled except the main switch key, you can always turn the hob off with the main switch in an emergency, but you shall unlock the hob first in the next operation.

Residual Heat Warning

When the hob has been operating for some time, there will be some residual heat. The letter “H” appears to warn you to keep away from it. 

Auto Shutdown

Safety feature of the hob is auto shut down. This occurs whenever you forget to switch off a cooking zone. The default shutdown times are shown in the table below.

Power level	1	2	3	4	5	6	7	8	9
Default working timer (hour)	8	8	8	4	4	4	2	2	2

Using the Timer:

You can use the timer in two different ways:

- You can use it as a minute minder. In this case, the timer will not turn any cooking zone off when the set time is up.
- You can set it to turn one or more cooking zones off after the set time is up.
- You can set the timer up to 99 minutes.


Using the Timer as a Minute Minder

If you are not selecting any cooking zone

1. Make sure the hob is turned on.

Note: you can use the minute minder before or after cooking zone setting finished.

2. Touch timer control, the “30” will show in the timer display. and the “0” flashes.

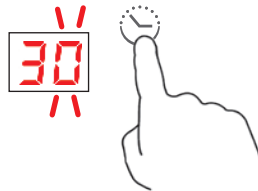

3. Set the time by touching the ⊖ or ⊕ control of the timer (e.g. 5)


How to adjust 10 minutes?

For touch control:


Long touch to adjust 10min



4. Touch timer control again, then “3” will flash.

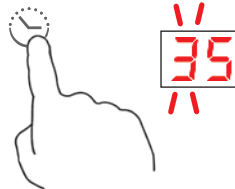

5. Set the time by touching the ⊖ or ⊕ control, now the timer you set is 95 minutes.

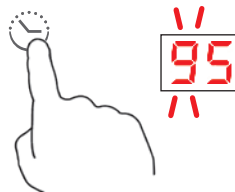

6. When the time is set, count down will begin immediately. The display will show the remaining time.

7. Buzzer will beep for 20 seconds & the timer indicator shows “- -” when the setting time finished.




User Guide

Setting the timer to turn one or more cooking zones off

If the timer is set on one zone:

1. Touching the heating zone selection control that you want to set the timer for.

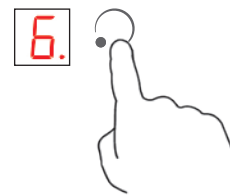

2. Touch timer control, the "30" will show in the timer display and the "0" flashes.




3. Set the time by touching the \ominus or \oplus control of the timer.


How to adjust 10 minutes?

For touch control:

Long touch to adjust 10min

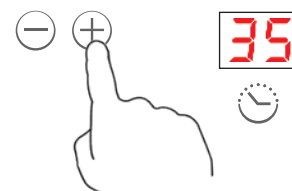

4. Touch timer control again, then "3" will flash.

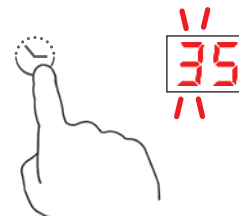

6. When the time is set, count down will begin immediately. Display will show the remaining time.

NOTE: The dot next to power level indicator will illuminate indicating that zone is selected.



7. When cooking timer expires, the corresponding cooking zone will switch off automatically.



Other cooking zones will keep operating if they are turned on previously.

If the timer is set on more than one zone:


1. When you set the time for several cooking zones simultaneously, decimal dots of the relevant cooking zones are on. The minute display shows the min. timer. The dot of the corresponding zone flashes.



2. Once the countdown timer expires, the corresponding zone will switch off. Then it will show the new min. timer and the dot of corresponding zone will flash.



- Touch the heating zone selection control, the corresponding timer will be shown in the timer indicator.

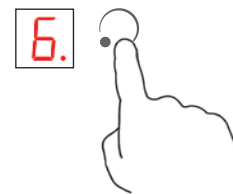

Cancel the timer:

1. Touching the heating zone selection control that you want to cancel the timer.

2. Touching the timer control, the indicator will flash.

3. Touch the “-” control to set the timer to “00”, the timer is cancelled.

Using the Pause function

1. Select the pause function (⏸), all the heating zones stop working. All the zone indication show “||”.

2. Touching the pause function (⏸) one more time, all the heating zones will revert to its original setting.

- The function is available when one or more heating zones is working.
- If you don't cancel the stop working mode within 30 minutes, the induction hob will automatically switch off.

Cooking Guidelines

Cooking



Take care when frying as the oil and fat heat up very quickly, particularly if you're using Power Boost. At extremely high temperatures oil and fat will ignite spontaneously and this presents a serious fire risk.

Cooking Tips

- When food comes to the boil, reduce the power setting.
- Using a lid will reduce cooking times and save energy by retaining the heat.
- Minimize the amount of liquid or fat to reduce cooking times.
- Start cooking on a high setting and reduce the setting when the food has heated through.

Simmering, cooking rice

- Simmering occurs below boiling point, at around 85°C, when bubbles are just rising occasionally to the surface of the cooking liquid. It is the key to delicious soups and tender stews because the flavours develop without overcooking the food. You should also cook egg-based and flour thickened sauces below boiling point.
- Some tasks, including cooking rice by the absorption method, may require a setting higher than the lowest setting to ensure the food is cooked properly in the time recommended.

Searing steak

To cook juicy flavoursome steaks:

1. Stand the meat at room temperature for about 20 minutes before cooking.
2. Heat up a heavy-based frying pan.
3. Brush both sides of the steak with oil. Drizzle a small amount of oil into the hot pan and then lower the meat onto the hot pan.
4. Turn the steak only once during cooking. The exact cooking time will depend on the thickness of the steak and how cooked you want it. Times may vary from about 2 – 8 minutes per side. Press the steak to gauge how cooked it is – the firmer it feels the more 'well done' it will be.
5. Leave the steak to rest on a warm plate for a few minutes to allow it to relax and become tender before serving.

For stir-frying

1. Choose a ceramic compatible flat-based wok or a large frying pan.
2. Have all the ingredients and equipment ready. Stir-frying should be quick.
If cooking large quantities, cook the food in several smaller batches.
3. Preheat the pan briefly and add two tablespoons of oil.
4. Cook any meat first, put it aside and keep warm.
5. Stir-fry the vegetables. When they are hot but still crisp, turn the cooking zone to a lower setting, return the meat to the pan and add your sauce.
6. Stir the ingredients gently to make sure they are heated through.
7. Serve immediately.

Cooking Guidelines

Heat Settings

Heat setting	Suitability
1-2	<ul style="list-style-type: none">• Delicate warming for small amounts of food• Melting chocolate, butter, and foods that burn quickly• Gentle simmering• Slow warming
3-4	<ul style="list-style-type: none">• Reheating• Rapid simmering• Cooking rice
5-6	<ul style="list-style-type: none">• Pancakes
7-8	<ul style="list-style-type: none">• Sauteing• Cooking pasta
9	<ul style="list-style-type: none">• Stir-frying• Searing• Bringing soup to the boil• Boiling water

Care and Cleaning

Care and Cleaning

What?	How?	Important!
<p>Everyday soiling on glass (fingerprints, marks, stains left by food or non-sugary spillovers on the glass)</p>	<ol style="list-style-type: none"> 1. Switch the power to the hob off. 2. Apply a hob cleaner while the glass is still warm (but not hot!) 3. Rinse and wipe dry with a clean cloth or paper towel. 4. Switch the power to the hob back on. 	<ul style="list-style-type: none"> • When the power to the hob is switched off, there will be no 'hot surface' indication but the cooking zone may still be HOT! Take extreme care. • Heavy-duty scourers, some nylon scourers and harsh/abrasive cleaning agents may scratch the glass. Always read the label to check if your cleaner or scourer is suitable. • Never leave cleaning residue on the hob: The glass may become stained.
<p>Boilovers, melts, and hot sugary spills on the glass</p>	<p>Remove these immediately with a fish slice, palette knife or razor blade scraper suitable for ceramic glass hobs, but beware of hot cooking zone surfaces:</p> <ol style="list-style-type: none"> 1. Switch the power to the hob off at the wall. 2. Hold the blade or utensil at a 30° angle and scrape the soiling or spill to a cool area of the hob. 3. Clean the soiling or spill up with a dish cloth or paper towel. 4. Follow steps 2 to 4 for 'Everyday soiling on glass' above. 	<ul style="list-style-type: none"> • Remove stains left by melts and sugary food or spillovers as soon as possible. If left to cool on the glass they may be difficult to remove or even permanently damage the glass surface. • Cut hazard: when the safety cover is retracted, the blade in a scraper is razor-sharp. Use with extreme care and always store safely and out of reach of children.
<p>Spillovers on the touch controls</p>	<ol style="list-style-type: none"> 1. Switch the power to the hob off. 2. Soak up the spill 3. Wipe the touch control area with a clean damp sponge or cloth. 4. Wipe the area completely dry with a paper towel. 5. Switch the power to the hob back on. 	<ul style="list-style-type: none"> • The hob may beep and turn itself off, and the touch controls may not function while there is liquid on them. Make sure you wipe the touch control area dry before turning the hob back on.

Trouble shooting

Hints and Tips

Problem	Possible causes	What to do
Hob cannot be turned on	No power.	Make sure the hob is connected to the power supply and that it is switched on. Check whether there is a power outage in your home or area. If you've checked everything and the problem persists, call a qualified technician.
Touch controls are unresponsive	Controls are locked.	Unlock the controls. See section 'Using your Hob' pg.11 for instructions.
Touch controls are difficult to operate	There may be a slight film of water over the controls or you may be using the tip of your finger when touching the controls.	Make sure the touch control area is dry and use the ball of your finger when touching the controls.
The glass is being scratched.	Rough-edged cookware. Unsuitable, abrasive scourer or cleaning products being used.	Use cookware with flat and smooth bases. See 'Choosing the right cookware'. See 'Care and cleaning'.
Some pans make crackling or clicking noises	May be caused by the construction of your cookware (layers of different metals vibrating differently).	This is normal for cookware and does not indicate a fault.
Induction hob makes a low humming noise when used on a high heat setting	This is caused by the technology of induction cooking.	This is normal, but the noise should quieten down or disappear completely when you decrease the heat setting.
Fan noise coming from the induction hob	A cooling fan built into your induction hob has come on to prevent the electronics from overheating. It may continue to run even after you've turned the induction hob off.	This is normal and needs no action. Do not switch the power to the induction hob off at the wall while the fan is running.

Trouble shooting

Hints and Tips

Problem	Possible causes	What to do
Pans do not become hot and appears in the display	The induction hob cannot detect the pan because it is not suitable for induction cooking. The induction hob cannot detect the pan because it is too small for the cooking zone or not properly centered on it	Use cookware suitable for induction cooking. See section 'Choosing the right cookware' Pg.10. Centre the pan and make sure that its base matches the size of the cooking zone
The induction hob or a cooking zone has turned itself off unexpectedly, a tone sounds and an error code is displayed (typically alternating with one or two digits in the cooking timer display)	Technical fault	Please note down the error letters and numbers, switch the power to the induction hob off at the wall, and contact a qualified technician

Failure Display and Inspection

If an abnormality comes up, the induction hob will enter the protective state automatically and display corresponding protective codes:

Code	Possible causes	What to do
E3/E7	Temperature sensor failure	Please contact the supplier.
E5	Overheat protection of ceramic glass.	Please turn off hob at isolation switch and turn back on after 30min
E4/E6	Temperature sensor of the IGBT failure.	Please contact the supplier
E1/E2	Abnormal supply voltage	Please inspect whether power supply is normal. Power on after the power supply is normal
Er	PCBA Failure	Please contact the supplier
Er	Overflow Protection	Dry the surface water and restart

The above are the judgment and inspection of common failures. Please do not disassemble the unit by yourself to avoid any dangers and damage to the induction hob.

Specifications

Technical Specification


Induction Hob	XITID90 Series
Cooking Zones	5 Zones
Supply Voltage	220-240V~
Installed Electric Power	9500W
Product Size L x W x H(mm)	900 x 520 x 57
Building-in Dimensions A x B (mm)	870 x 490

Weight and Dimensions are approximate. Because we continually strive to improve our products, we may change specifications and designs without prior notice.

Installation

Selection of installation equipment

Cut out the work surface according to the sizes shown in the drawing. For the purpose of installation and use, a minimum of 50mm space shall be preserved around the hole. Be sure the thickness of the work surface is at least 30mm. Please select heat-resistant work surface material to avoid larger deformation caused by the heat radiation from the hotplate. As shown below:

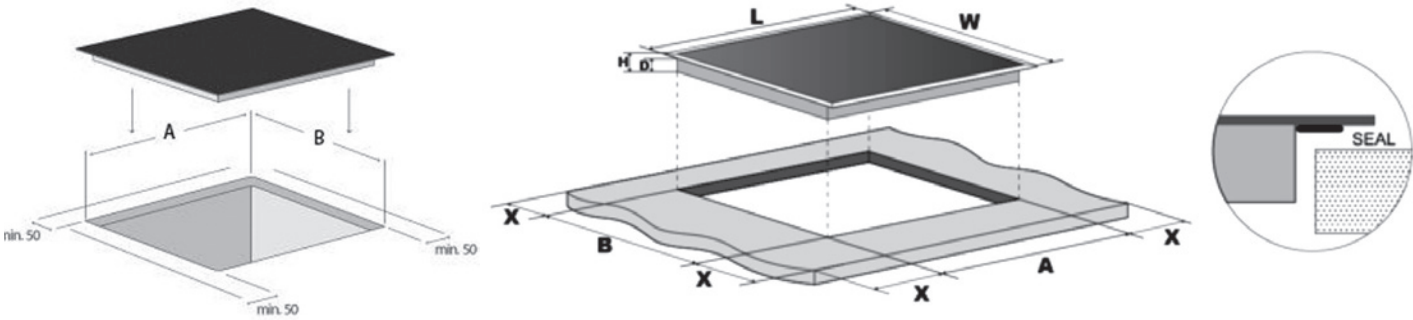

Model	L(mm)	W(mm)	H(mm)	D(mm)	A(mm)	B(mm)	X(mm)
XITID90	900	520	57	53	870	490	50 min

Installation



IMPORTANT:

Make sure the hob is well ventilated and the air inlets and outlets are not obstructed. Ensure the hob is in good working state. As shown below.



NOTE:

The safety distance between the hotplate and the cupboard above the hotplate should be at least 760mm.

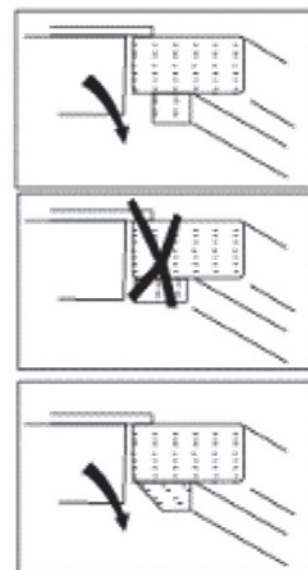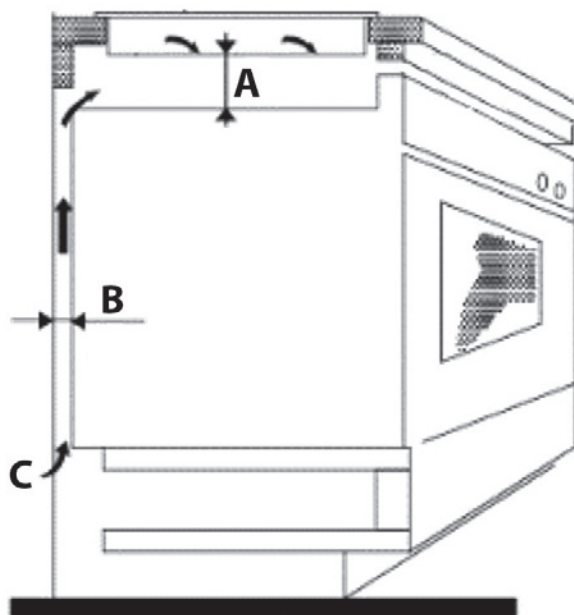

Model	A(mm)	B(mm)	C
XITID90	50 min	20 min	Air intake

Before you install the hob, make sure that:

- The work surface is square, level, and no structural members interfere with space requirements
- The work surface is made of a heat-resistant material
- If the hob is installed above an oven, the oven has a built-in cooling fan
- The installation will comply with all clearance requirements, applicable standards and regulations
- A suitable isolating switch providing full disconnection from the mains power supply is incorporated in the permanent wiring, mounted and positioned to comply with the local wiring rules and regulations.

The isolating switch must be of an approved type and provide a 3mm air gap contact separation in all poles (or in all active [phase] conductors if the local wiring rules allow for this variation of the requirements)

- The isolating switch will be easily accessible to the customer with the hob installed
- You consult local building authorities and by-laws if in doubt regarding installation
- You use heat-resistant and easy-to-clean finishes (such as ceramic tiles) for the wall surfaces surrounding the hob.

When you have installed the hob, make sure that


- The power supply cable is not accessible through cupboard doors or drawers
- There is adequate flow of air from outside the cabinetry to the base of the hob
- If the hob is installed above a drawer or cupboard space, a thermal protection barrier is installed below the base of the hob
- The isolating switch is easily accessible by the customer

Before locating the fixing brackets


The unit should be placed on a stable, smooth surface (use the packaging).

Do not apply force onto the controls protruding from the hob.

Fix the hob on the work surface by screw four brackets on the bottom of hob (see picture after installation).

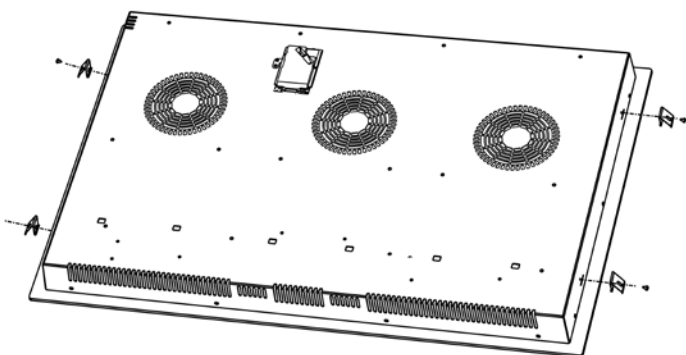

Adjust the bracket position to suit for different work surface's thickness.

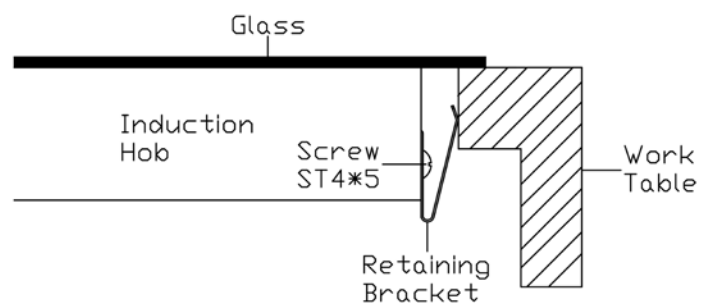


Installation

1. The hob must be installed by qualified personnel or technicians.
We have professionals at your service. Please never conduct the operation by yourself.
2. The hob shall not be mounted to cooling equipment, dishwashers and rotary dryers.
3. The hob shall be installed so better heat radiation can be ensured to enhance its reliability.
4. The wall and induced heating zone above the work surface shall withstand heat.
5. To avoid any damage, the sandwich layer and adhesive must be resistant to heat.
6. A steam cleaner is not to be used.
7. This ceramic can be connected only to a supply with system impedance no more than 0.427 ohm.
In case necessary, please consult your supply authority for system impedance information.

Connecting the hob to the mains power supply

The power supply should be connected in compliance with the relevant standard or a single-pole circuit breaker. Suitable for 5G1.5 power cord.

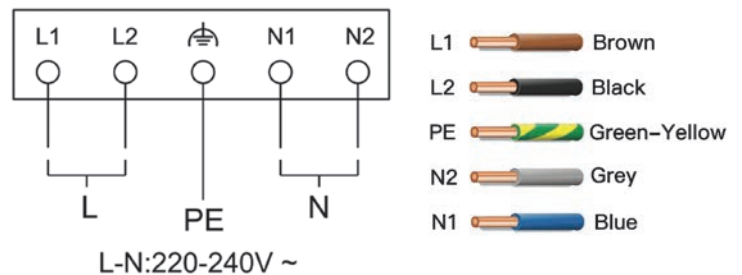

1. If the cable is damaged or needs replacing, this should be done by an after sales technician using the proper tools, so as to avoid any accidents.
2. If the appliance is being connected directly to the mains supply, an omni polar circuit breaker must be installed with a minimum gap of 3mm between the contacts.
3. The installer must ensure that the correct electrical connection has been made and that it complies with safety regulations.
4. The cable must not be bent or compressed.
5. The cable must be checked regularly and only replaced by a proper qualified person.



DISPOSAL:

Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.

This appliance is labelled in compliance with European directive 2002/96/EC for Waste Electrical and Electronic Equipment (WEEE). By ensuring that this appliance is disposed of correctly, you will help prevent any possible damage to the environment and to human health, which might otherwise be caused if it were disposed of it in the incorrect way.

The symbol on the product indicates that it may not be treated as normal household waste. It should be taken to a collection point for the recycling for electrical and electronic goods.

This appliance requires specialist waste disposal. For further information regarding the treatment, recover and recycling of this product please contact your local council, your household waste disposal service, or the shop where you purchased it.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

If you have any questions, or need information, contact Parex Industries Limited:
Free call: 0800 200 510 or Email: info.parex@whirlpool.com