

# INSTALLATION AND USER MANUAL

## XIT Undermount Glass Series



XIT52UM\_BGLASS



XIT75UM\_BGLASS

# Contents

<b>Safety</b>	<b>3-4</b>
<b>Prepare for Installation</b>	<b>5</b>
<b>Installation</b>	<b>6-11</b>
<b>Operation</b>	<b>12</b>
<b>Cleaning and Maintenance</b>	<b>13-14</b>
GREASE FILTERS	13
STAINLESS STEEL CLEANING	13
PAINTED FINISH CLEANING	13
LED LAMP REPLACEMENT	14
<b>Troubleshooting</b>	<b>15</b>
<b>Environmental Protection</b>	<b>16</b>

## **WARNING**

### **TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:**



- Use this unit only in the manner intended by the manufacturer. If you have questions, contact the manufacturer at the address or telephone number listed in the warranty.



- Before servicing or cleaning unit, unplug or disconnect the rangehood from the power supply.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Installation work and electrical wiring must be done by a qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
- Sufficient air is needed for proper combustion and exhausting of gases through the flue (chimney) of fuel burning equipment to prevent back drafting.
- When cutting or drilling into a wall or ceiling, do not damage electrical wiring and other hidden utilities.
- Ducted fans must always be vented to the outdoors.
- Ensure the requirements of the local authorities are adhered to concerning the discharge of exhaust air.
- This unit must be earthed.
- When applicable local regulations comprise more restrictive installation and/or certification requirements, the aforementioned requirements prevail on those of this document and the installer agrees to conform to these at his own expense.
- Clean rangehood frequently. Grease should not be allowed to accumulate on fans, filters or in exhaust ducts.

### **Warning:**

Failure to install the screws or fixing device in accordance with these instructions may result in electrical hazards.

## WARNING

### TO REDUCE THE RISK OF INJURY TO PERSONS IN THE EVENT OF A RANGE TOP GREASE FIRE, OBSERVE THE FOLLOWING\*:

1. SMOTHER FLAMES with a close-fitting lid, cookie sheet or metal tray, then turn off the burner. BE CAREFUL TO PREVENT BURNS. IF THE FLAMES DO NOT GO OUT IMMEDIATELY, EVACUATE AND CALL THE FIRE DEPARTMENT.
2. NEVER PICK UP A FLAMING PAN – You may be burned.
3. DO NOT USE WATER, including wet dishcloths or towels – This could cause a **violent steam explosion**.
4. Use an extinguisher ONLY if:
  - a) You own a Class ABC extinguisher and you know how to operate it.
  - b) The fire is small and contained in the area where it started.
  - c) The fire service has been called.
  - d) You can fight the fire with your back to an exit.

## CAUTION


- For indoor use only.
- For general ventilating use only. Do not use to exhaust hazardous or explosive materials and vapors.
- To avoid motor bearing damage and noisy and/or unbalanced fan blade, keep drywall spray, construction dust, etc. off rangehood.
- Your hood motor has a thermal overload which will automatically shut off the motor if it becomes overheated. The motor will restart when it cools down. If the motor continues to shut off and restart, have the hood serviced.
- Always follow the cooking equipment manufacturer's requirements regarding the ventilation needs.
- To reduce the risk of fire and to properly exhaust air, be sure to duct air outside – Do not exhaust air into spaces within walls or ceiling or into attics, crawl space or garage.
- When installing, servicing or cleaning the unit, it is recommended to wear safety glasses and gloves.
- Please read specification label on product for further information and requirements.

# Prepare for Installation

## Prepare for Installation


### a) Extraction/Ventilation mode:

You can install the 1.5m long and 150mm diameter aluminum exhaust pipe for extracting, which is included in the installation kit.

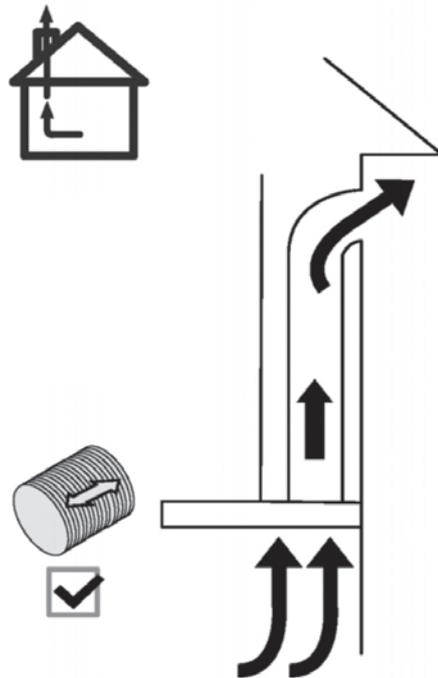

### b) When possible, use at least 60cm straight runs before any turns.

Larger duct work may be required for best performance with longer duct runs.

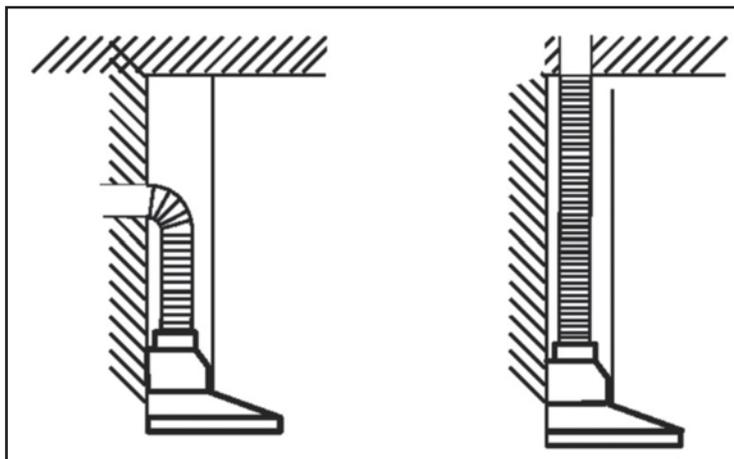


### c) Before installation, don't connect the power.

# Installation




## Installing the Hood

- 1) Remove all protective plastic film from the hood and all parts.
- 2) Recommended installation height: 650~750mm above the cooktop for best extraction.
  - Required height over electric hob: 650mm.
  - Required height over gas hob: 750mm

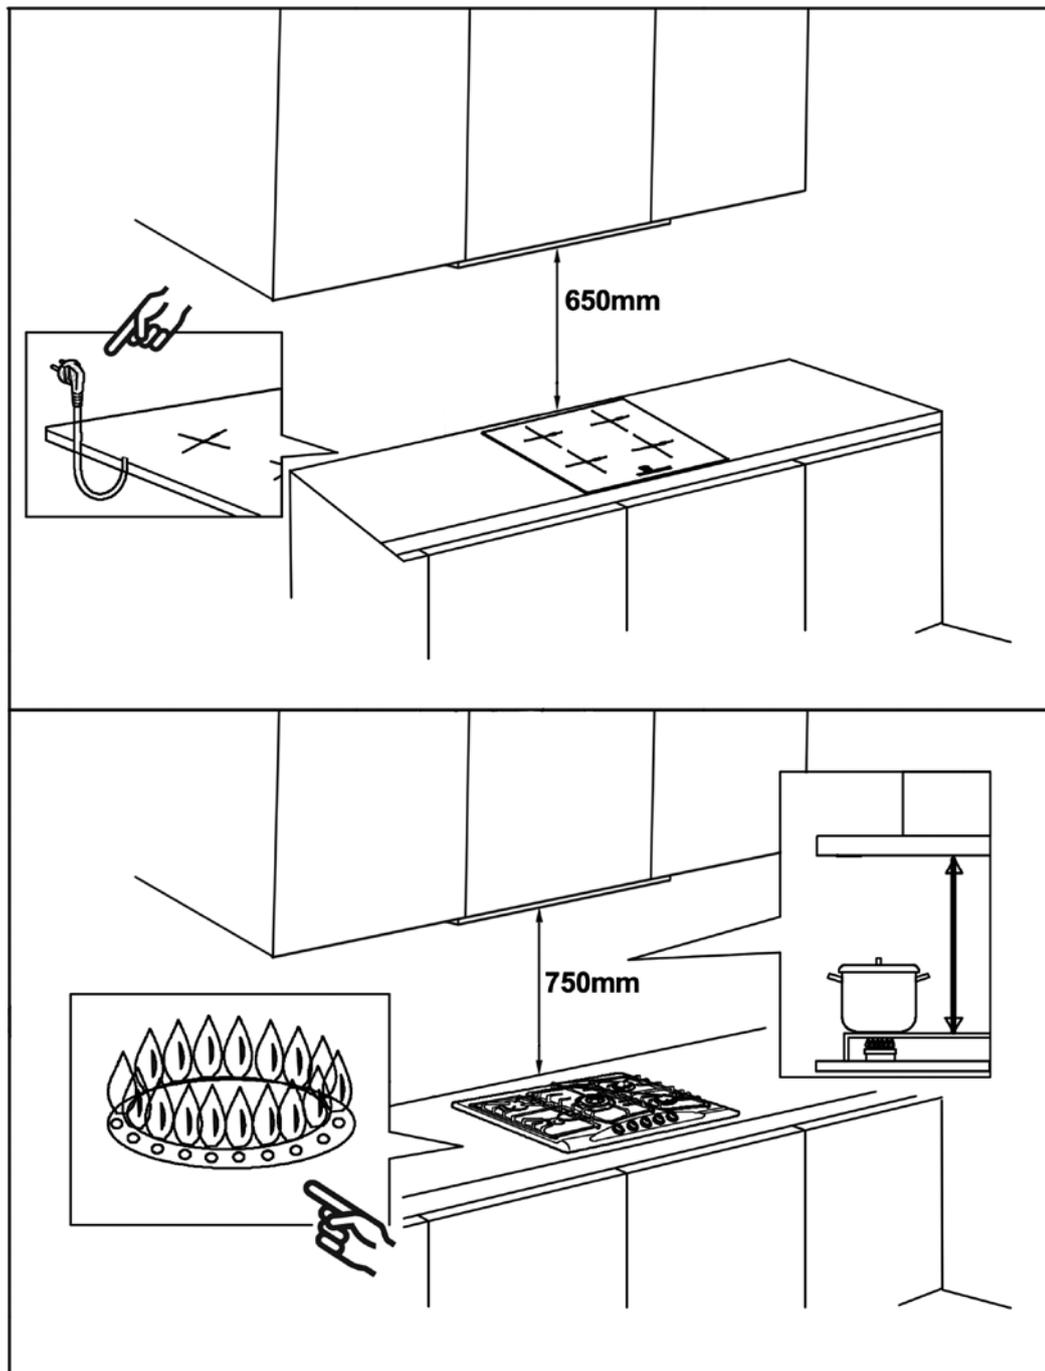


3) Below is the 1:1 installation diagram, with measurement:

## XIT75UM\_BGLASS

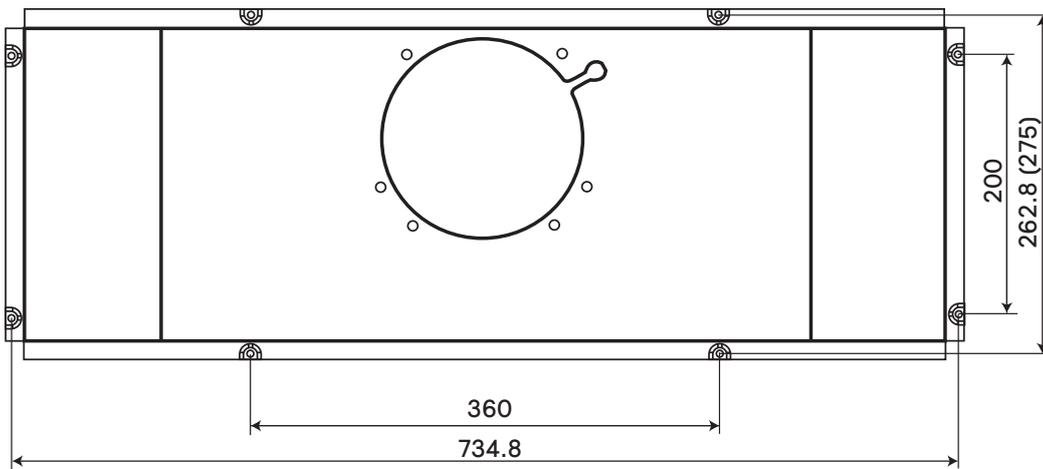


## XIT52UM\_BGLASS

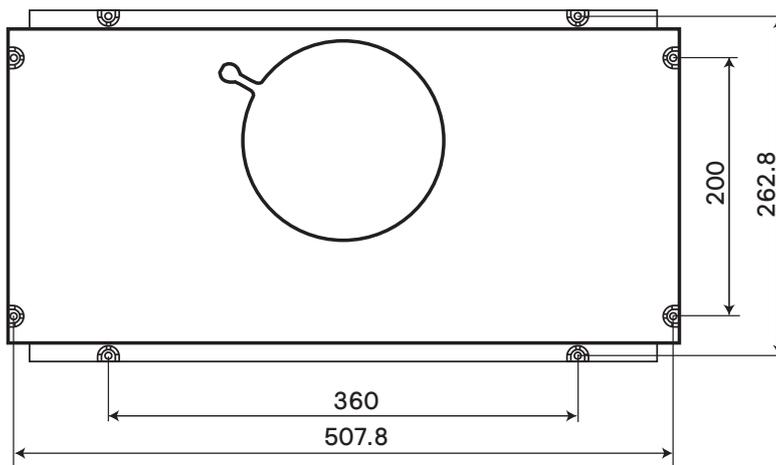


# Installation

- 4) Cut holes on the corresponding positions in the cabinetry according to the pictures shown.

**XIT75UM\_BGLASS**

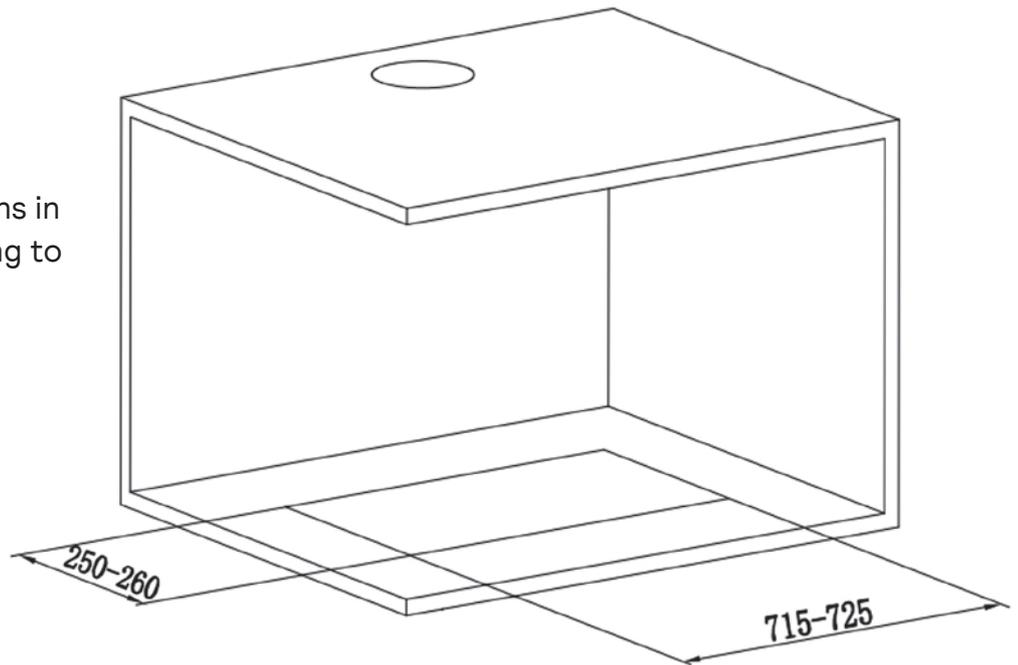


**XIT52UM\_BGLASS**

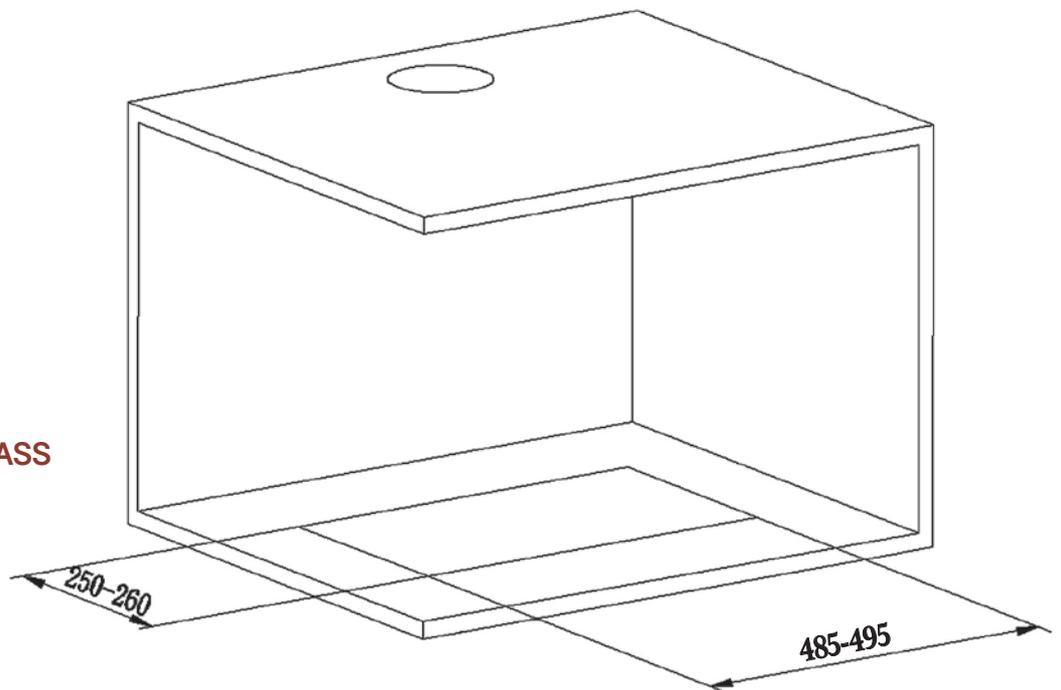


# Installation


5) Remove the grease filter, press the lock and pull it downward.

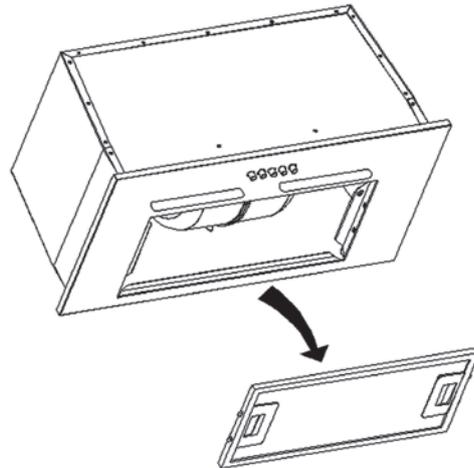

6) Loosen the two screws on the front panel, pull down the front panel and pull out the lamp line. Open the power protection cover and disconnect the plug.

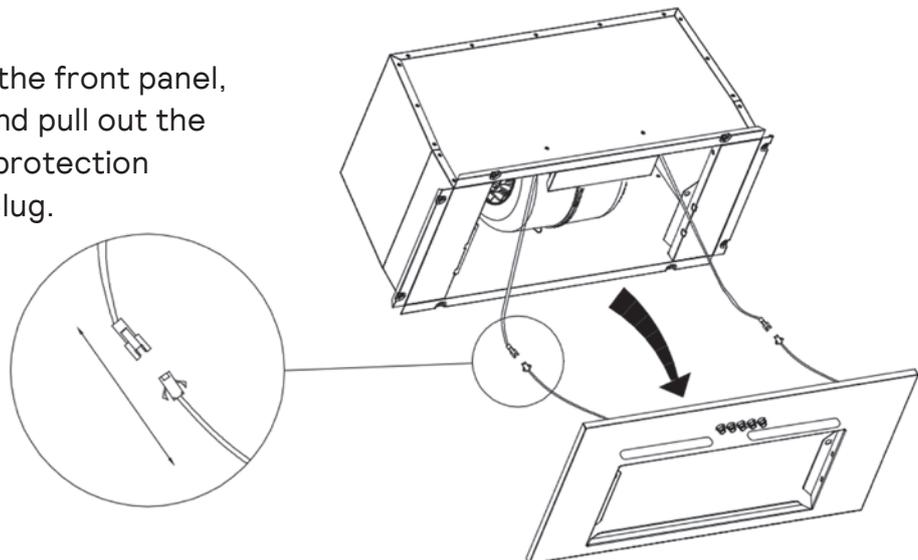


7) Remove the front panel.

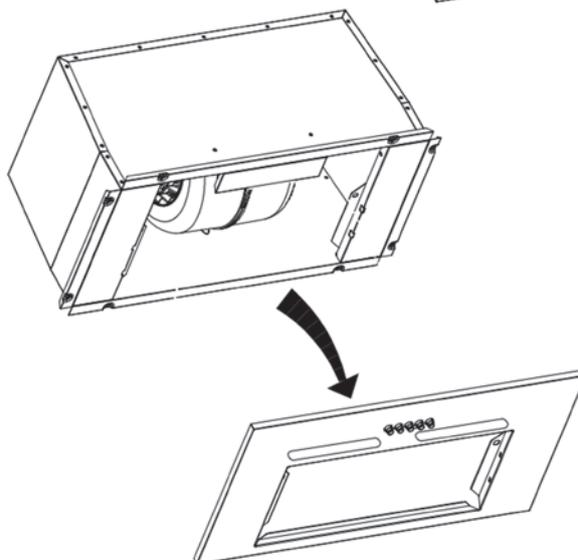


# Installation


- 8) Fix the rangehood on the cabinetry with 8 pcs of 4x20mm screws.

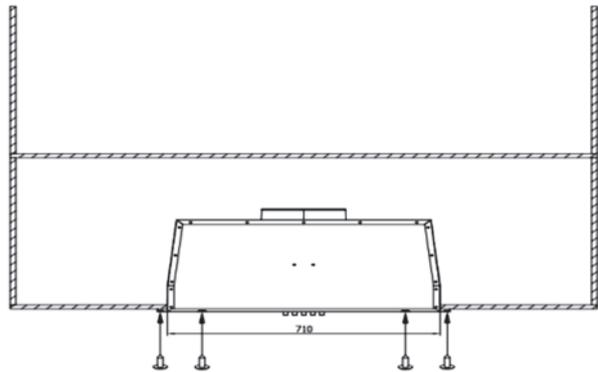


- 9) Insert the plug of LED light into the power protection box and close the cover.

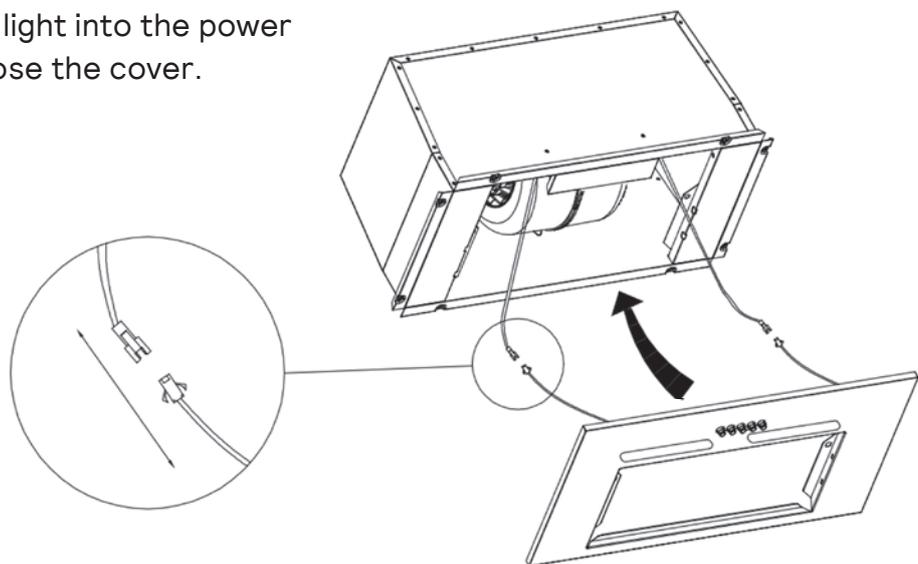

- 10) Then install the front panel and tighten the 2 x screws.

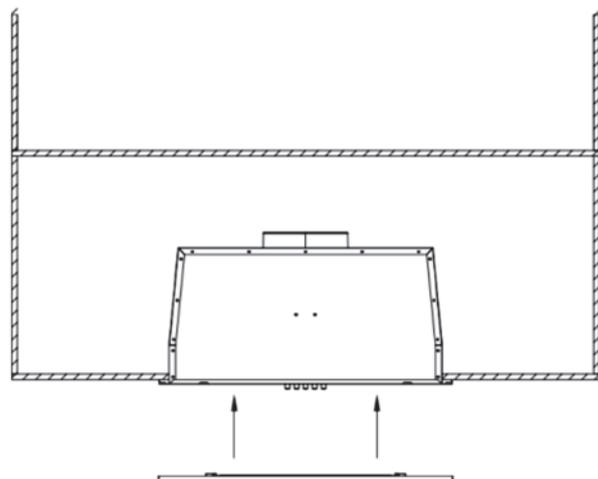

11) Install the grease filter.

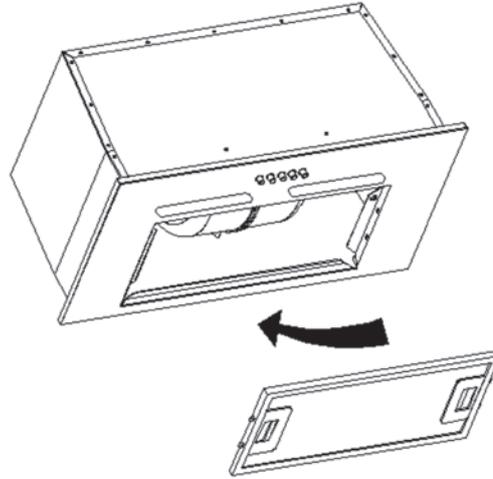


**NOTE:**

- Flexi Ducting is supplied with this rangehood.
- Connect Flexi Ducting to hood with metal foil duct tape to make joints secure and air-tight.
- Make sure the damper assembly (or round duct plate) enters the ductwork and that the damper opens and closes freely.

# Operation

Always turn your hood on before you begin cooking to establish an airflow in the kitchen. Let the rangehood run for a few minutes to clear the air after you turn off the cooktop. This will help to keep the entire kitchen clean and fresh.

Push button - Operate the hood as follows:

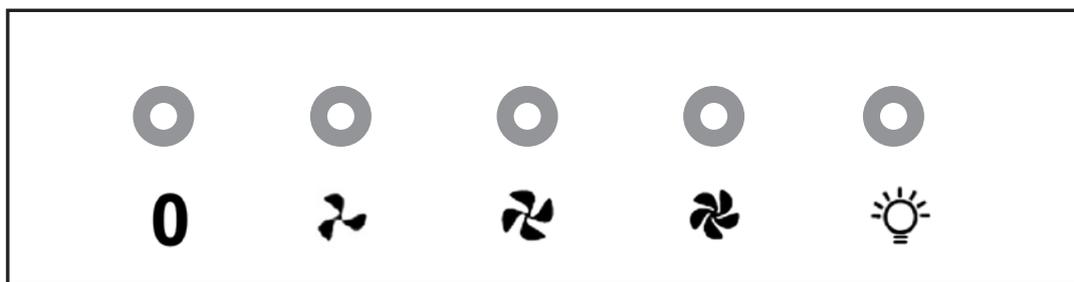

- 0 Off button**  
To turn off the rangehood.
-  **Low Speed button**  
Suitable for simmering and cooking which does not produce much steam.
-  **Medium Speed button**  
Ideally for standard cooking.
-  **High Speed button**  
For when smoke and steam is produced when cooking.
-  **Light button**  
Turns lights on and off.

# Cleaning and Maintenance

Proper maintenance of the rangehood will assure proper performance of the unit. Before cleaning unit, unplug or disconnect the rangehood from the power supply.

## GREASE FILTERS

The grease filters should be cleaned frequently.

Can be cleaned in dishwasher under high temperature **without** using any detergent. Or soak in sink with hot water and detergent for 10 minutes and then rinse off with boiling water.

## STAINLESS STEEL CLEANING

### Do:

- Regularly clean it with a cloth soaked with warm water and mild soap or liquid dish detergent.
- You may also use a specialised household stainless steel cleaner.

### Don't:

- Use any steel or stainless-steel wool or any other scrapers to remove stubborn dirt.
- Use any harsh or abrasive cleansers.
- Let plaster dust or any other construction residues reach the hood.
- During construction/renovation, cover the rangehood to make sure no dust sticks to the stainless-steel surface.

### Avoid when choosing a detergent:

- Any cleaners that contain **bleach** will attack stainless steel.
- Any products containing: **chloride, fluoride, iodide, bromide** will deteriorate surfaces rapidly.
- Any combustible products used for cleaning such as **acetone, alcohol**, etc, are highly flammable and should never be used close to a rangehood.

## PAINTED FINISH CLEANING:

Clean with warm water and mild detergent only. If discoloration occurs use a finish polish such as automotive polish. (**DO NOT** use a rough abrasive cleaner or porcelain cleaner.)

# Cleaning and Maintenance

## LED REPLACEMENT


- LED lamp:




## ⚠ CAUTION

Before cleaning or repairing and replacing accessories, please make sure to shut down the power before operation, so as to avoid electric shock, damage to human body and even endanger life safety!


- 1) Turn off the hood and unplug the power outlet. Detach the aluminum grease filter in order for you to replace the LED lamp.

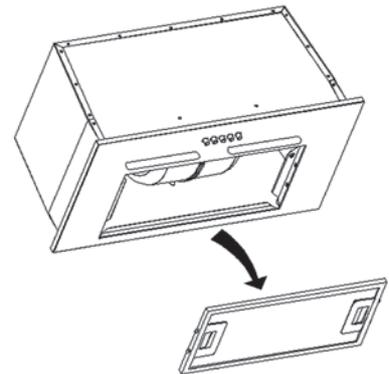

- 2) Loosen the two screws on the panel and unplug the LED light connector, then take out the panel assembly.

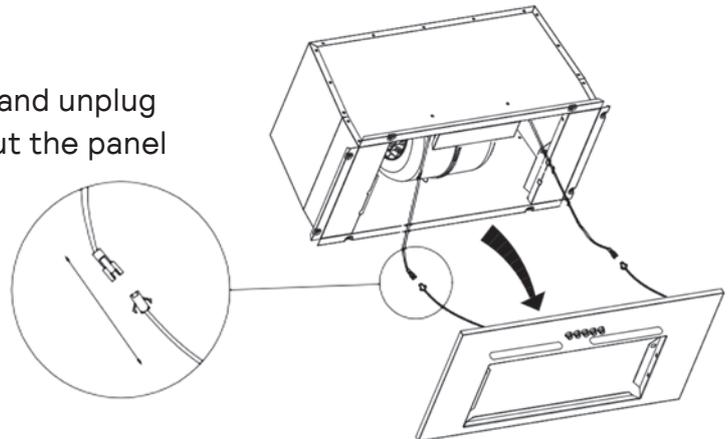

- 3) Loosen the fixing screws on the LED light on the panel and replace the LED light.

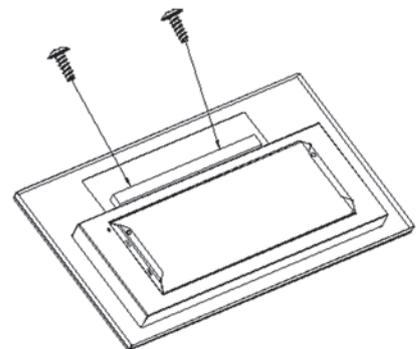


# Troubleshooting

Problem	Possible Cause	Solution
<b>Extractor hood does not turn on</b>	No electrical supply	Make sure that rangehood is plugged into powered outlet. Test outlet with other device if not working
<b>My rangehood has poor performance</b>	Inadequate ventilation	Ensure that the kitchen is sufficiently ventilated to allow entry of fresh air
	The rangehood and cooktop are too far away from each other	Optimal distance is 65~75cm above the cooktop for best extraction
	Check and make sure the tape holding down the damper flaps at the vent hole are removed before use	Remove the tape holding down the damper
	Grease filters clogged with grease build-up	Clean the grease filters or replace the grease filters
	Motor is running but no extraction	Please contact Customer Care Service on 0800 200 510
<b>My rangehood is noisy</b>	Check inside the rangehood for any loose debris and remove	Please contact Customer Care Service on 0800 200 510
	If the noise is from the motor, please contact our Customer Care Service	
<b>Lights are not working</b>	Light is damaged	Replace with new LED lamp; Instruction for this on left hand side page
	The light wire terminal is loose	Check and reconnect the plug

If problem persists after the above checks, please contact Customer Care Centre for assistance.

# Environmental Protection

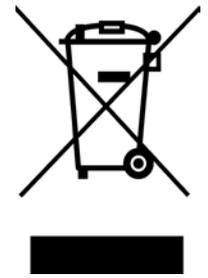

**Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.**

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol on the product indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

**If you have any questions, or need information, contact Parex Industries Limited:  
Free call: 0800 200 510 or Email: [info.parex@whirlpool.com](mailto:info.parex@whirlpool.com)**